



**SECTION A-A**  
**CONCRETE ANCHOR SLAB**




**SECTION B-B**

**NOTES**

- For additional details of this crash cushion, refer to manufacturer's installation instructions.
- For details of the REACT Crash Cushion with concrete backup block (no self contained backup support), see Standard Plan A82C1.
- This crash cushion comes from the manufacturer as a completely pre-assembled unit, including the self contained cable backup support.
- Place the crash cushion unit on the cured concrete anchor slab and use the base track frame of the crash cushion as a template for drilling anchor bolt holes. Drill holes in slab and attach crash cushion with wedge anchor bolts supplied by the manufacturer.
- Place manufacturer supplied cover over cylinders and attach cover to cylinders with manufacturer supplied fasteners.

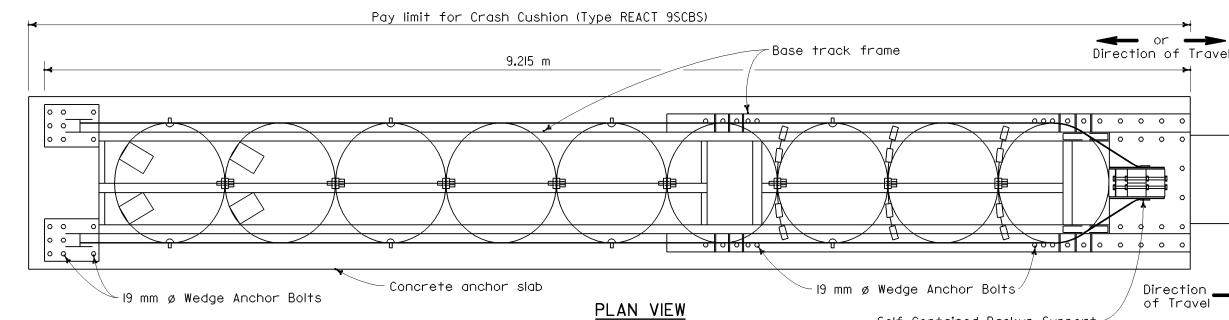

**PLAN VIEW**

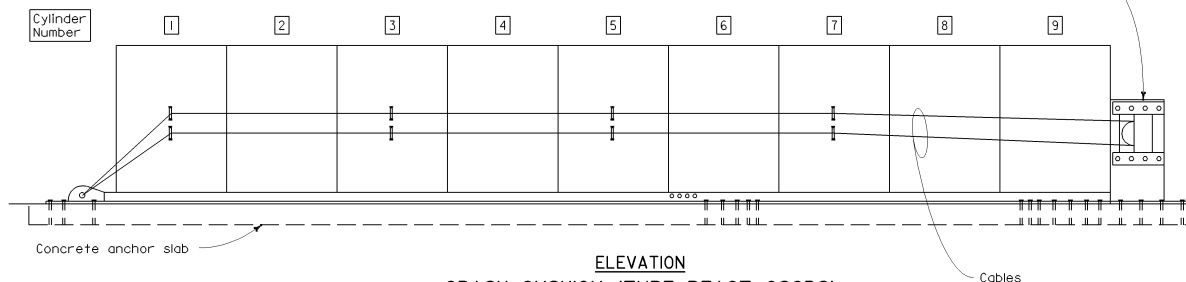

**ELEVATION**  
**CRASH CUSHION (TYPE REACT 9SCBS)**

See Note 2

STATE OF CALIFORNIA  
DEPARTMENT OF TRANSPORTATION  
**CRASH CUSHION**  
**(TYPE REACT 9SCBS)**

NO SCALE  
ALL DIMENSIONS ARE IN  
MILLIMETERS UNLESS OTHERWISE SHOWN

**A82D1**



DIST	COUNTY	ROUTE	KILOMETER POST TOTAL PROJECT	SHEET TOTAL NO. SHEETS
Ellis K. Hirst REGISTERED CIVIL ENGINEER July 1, 2004 PLANS APPROVAL DATE The State of California or its officers or agents shall not be responsible for the accuracy or completeness of electronic copies of this plan sheet. To get to the Caltrans web site, go to: <a href="http://www.dot.ca.gov">http://www.dot.ca.gov</a>				
Ellis K. Hirst No. C17926 Exp. 6-30-05 CIVIL STATE OF CALIFORNIA				